

PB-CI7X79N SOP to remove R88 fixing Intel i7 3820 CPU no boot issue

Location of R88:

